



JKU FREEDOM SERIES ROCK SLIDERS #0124-26301

BEFORE YOU BEGIN

Thank you for purchasing these Fly Offroad Freedom Series Rock Sliders and joining us in *The Pursuit of Freedom!* Please inspect the package contents upon opening. Ensure it is complete according to the parts list below and that none of the contents are damaged. If there are any discrepancies contact Fly Offroad at info@flyoffroad.com and we will correct the error. Read these instructions fully before beginning the installation. If you are not confident in your ability to successfully perform each of the tasks listed please consult a professional before attempting. Contact Fly Offroad before you begin the installation if you have any questions or concerns. This product is RAW metal and should be painted, powder coated, or protected against the elements in some manner or rusting may occur.

APPLICATIONS

These installations instructions apply to the following Fly Offroad products:



0124-26301 Fly Offroad Rock Sliders for Jeep Wrangler JKU Only

PARTS LIST

Part	Qty
Fly Offroad Freedom Series Slider, driver side	1
Fly Offroad Freedom Series Slider, passenger side.....	1
Fly Offroad Replaceable Skid Panel, driver side.....	1
Fly Offroad Replaceable Skid Panel, passenger side.....	1
Hardware Kit	
1/4-20 counter sunk flat head screw, 3/4" long.....	28
1/4-20 nylon insert flange lock nut.....	28
5/16-18 carriage bolt, 1" long.....	12
5/16-18 nylon insert flange lock nut.....	12

TOOLS NEEDED

- A friend to help lift sliders
- Standard socket set
- Drill with 3/8" bit

IMPORTANT INFORMATION

- Fly Offroad Rock Sliders are designed to be installed onto the undamaged, structurally sound frame of a 4 door, Jeep Wrangler JKU ONLY. Installing on a damaged frame or any other vehicle will void all warranties and is asking for vehicle damage, grave bodily harm, death, or extreme embarrassment as your sliders fall off out in the middle of nowhere. Please test fit before paint or powder coat to ensure your frame is straight and fully to spec. and that the slider mates perfectly with the frame rails.

- **NOTE:** These instructions depict the sliders being installed with the replaceable skid panels already installed. It is easier to install the Fly Offroad Rock Sliders first without the skid panels as they will be lighter. Once fully bolted on you can install the skid panels (step 11).

INSTALLATION PROCEDURE



1. Remove the three body mounts on the frame under the front and rear doors.



2. With the help of a friend mount the rock slider to the body mount locations using the three stock body mount bolts.

FOLLOW FLY OFFROAD'S SOCIAL MEDIA




FLYOFFROAD4X4



FLY_OFF_ROAD



3. Mark the six locations on the body panels that need to be drilled
4. Remove the three body mounts and with the help of a friend remove the rock slider.
5. Using a drill and 3/8" bit drill the marked holes in the body panels.

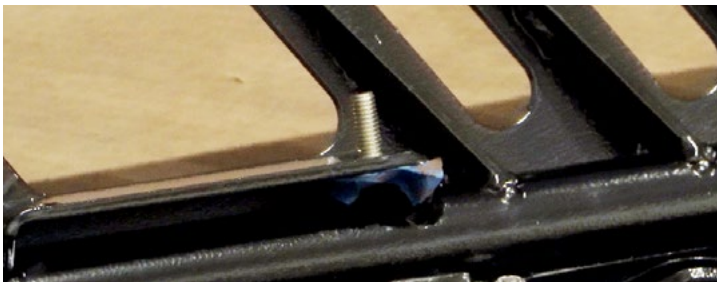

6. *Optional:* Use some tape to hold the carriage bolts in the slider as you install it again. You can also install the slider then feed the bolts through the holes.

7. With the help of a friend reinstall the slider and attach the three body mount bolts back into their locations.



8. Wiggle your fingers behind the slider and/or skid panel to hold the carriage bolt in place and using a 1/2" socket or wrench tighten the carriage bolts to the body panels.
9. If you used the tape in step 6 remove the tape from the bolt heads
10. Even though these instructions and the video instructions show the replaceable skid panels already installed, the best time to do it is AFTER the rock sliders have been fully bolted to the JK.
11. Place the replaceable skid panel against the rock slider so that the holes align. The panels are not interchangeable, there is a driver and passenger side.
12. Using the supplied 1/4-20 bolts and locking nuts affix the skid panel to the Fly Offroad Rock Slider.
13. Repeat this process for the Fly Offroad Rock Slider on the opposite side.
14. Installation is complete. Go slide on some rocks!

MORE ARMOR & FENDERS FROM FLY OFFROAD!

One of the best things you can do to make your Jeep look better is replace the crappy plastic stock fenders. Not only are they ugly but they rob your rig of precious travel. Add to the appeal of your Jeep with a set of Fly Offroad Freedom Series Fenders then protect your investment as well as increase the functionality of your rig with Freedom Series Bumpers and Skid Plates from Fly Offroad.

FENDERS

- Allows up to 40" tires
- Ridged, stamped 1/8" steel plate with formed, stamped baseplate
- Sold unfinished
- Made in the USA
- 2-year warranty



Front #0124-16101 - Rear #0124-16201

REAR BUMPER

- Fully boxed, internally gusseted, 3/16" steel
- Recessed locations for mounting lights
- Integrated Class III 2" hitch receiver
- Sold unfinished
- Made in the USA
- 2-year warranty



#0124-12201

SKID PLATE

- Skid protection for crash bars and Rubicon sway bar disconnects
- Max. approach angle
- 3/16" steel
- Locations and brackets for rock or fog lights
- Sold unfinished
- Made in the USA
- 2-year warranty



#0124-32101

FRONT BUMPER

- Fully boxed, internally gusseted, 3/16" steel
- 1/8" DOM tubing
- Max. approach angle
- Recessed locations for mounting lights
- Sold unfinished
- Made in the USA
- 2-year warranty



#0124-12101