



JK/JKU FREEDOM SERIES WINCH FAIRLEAD #1195-46101

BEFORE YOU BEGIN

Thank you for purchasing this Fly Offroad Winch Fairlead and joining us in *The Pursuit of Freedom!* Please inspect the package contents upon opening. Ensure it is complete according to the parts list below and that none of the contents are damaged. If there are any discrepancies contact Fly Offroad at info@flyoffroad.com and we will correct the error. Read these instructions fully before beginning the installation. If you are not confident in your ability to use a wrench and hex key please consult a professional before attempting. Contact Fly Offroad before you begin the installation if you have any questions or concerns.

APPLICATIONS

These installations instructions apply to the following Fly Offroad products:



1195-46101 Fly Offroad Winch Fairlead

PARTS LIST

Part	Qty
Fly Offroad Freedom Series Winch Fairlead.....	1
Hardware Kit	
3/8"-16 socket head screw, 1" long.....	2
3/8" washer.....	2
3/8"-16 nylon flange lock nut.....	2

TOOLS NEEDED

- 5/16" hex key
- 9/16" open ended wrench or ratchet and socket
- Any tools necessary to remove your old fairlead, if installed, and to remove and reinstall your hook or thimble, if installed

IMPORTANT INFORMATION

- This Fly Offroad Winch Fairlead is designed to be installed onto an undamaged fairlead bracket (1195-46102 is the recommended Fly Offroad product) or a bumper that was designed to mount a winch fairlead, that is installed on the structurally sound bumper and utilizing a structurally sound and fully functional winch. Installing on a damaged frame, bumper, fairlead bracket, or with a damaged winch will void all warranties and is asking for vehicle damage, grave bodily harm, death, or extreme embarrassment as your fairlead, winch, or bumper falls off while in the middle of nowhere.

INSTALLATION PROCEDURE



Fly Offroad Winch Fairlead Bracket 1195-46102

NOTE: Installation of this winch fairlead may require a fairlead bracket for installation. Fly Offroad offers 1195-46102 that mates perfectly with our Freedom Series Front Bumper and this winch fairlead. You may already have a fairlead bracket or you may have a bumper with an internally mounted winch, both of which should not require a fairlead bracket.

1. If present, remove the hook or thimble installed on your winch using the required tools for your specific application.



2. If present, remove the fairlead already on your fairlead bracket or bumper using the required tools for your specific application.

FOLLOW FLY OFFROAD'S SOCIAL MEDIA



FLYOFFROAD4x4



FLY_OFF_ROAD



3. Using the supplied hardware and a 5/16" hex key and 9/16" wrench or ratchet/socket combo install the new Fly Offroad Freedom Series Winch Fairlead. It may be easiest to put the washer on the bolts, put both bolts into the fairlead, and while holding the bolts in the fairlead fish the rope through the opening and use the bolts as guides while placing the fairlead in position. Hand tighten them both before fully torquing them.



4. Install your hook or thimble using the required tools for your specific application.
 5. Congratulations! Your new Fly Offroad Freedom Series Winch Fairlead is now installed and you are ready for *The Pursuit of Freedom!*

CLAW PAD FOOT PEGS!

- Stretch your legs while crawling with your doors off
- Quickly and easily install into Jeep door hinges
- Forged steel, powder coated black for the ultimate strength
- Made in the USA
- 2-year warranty



Claw Pad Foot Pegs
#0195-02301




CRAWL CLAW GRAB HANDLES!

- Low profile
- Mounts to stock locations
- Integrated finger track support for grip
- Anodized black, aircraft-grade aluminum
- Made in the USA
- 2 year warranty



Crawl Claw Grab Handles
Front & Rear
#0124-02601

Rear JK Crawl Claws
#0124-02201

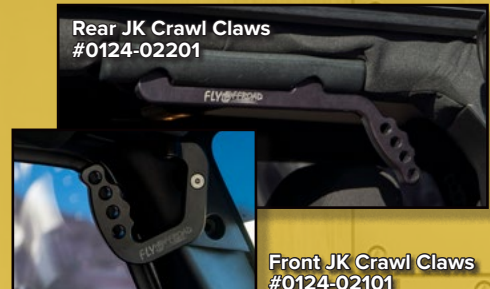

Front JK Crawl Claws
#0124-02101

ARMOR: BUMPERS, SKID PLATES, SLIDERS!

Protect the investment you've made in your Jeep with Fly Offroad Armor!

FRONT BUMPER

- Fully boxed, internally gusseted, 3/16" steel
- 1/8" DOM tubing
- Max. approach angle
- Recessed locations for mounting lights
- Sold unfinished
- Made in the USA
- 2-year warranty



#0124-12101

REAR BUMPER

- Fully boxed, internally gusseted, 3/16" steel
- Recessed locations for mounting lights
- Integrated Class III 2" hitch receiver
- Sold unfinished
- Made in the USA
- 2-year warranty



#0124-12201

SKID PLATES


- Skid protection for crash bars and Rubicon sway bar disconnects
- Max. approach angle
- 3/16" steel
- Locations and brackets for rock or fog lights
- Sold unfinished
- Made in the USA
- 2-year warranty



#0124-32101

ROCK SLIDERS

- Protects your Jeep's rocker panels
- Outer skid panel is replaceable
- 3/16" steel
- 1/8" DOM tubing
- Sold unfinished
- Made in the USA
- 2-year warranty



#0124-26301